



19, rue de l'Aviation 21121 DAROIS FRANCE ☎: (33) 03 80 35 60 62 Fax: (33) 03 80 35 60 63

Exploitation

REF: O EX NO 07 00

MCR CLUB 100 CV FLIGHT MANUAL

N° d'exemplaire	
-----------------	--

Edition de base:

Pages	Date	Rédigé par	Visa	Vérifié par	Visa
39	09/11/00	N. BOUCHOUT		C. BELIN	

Mise à jour:

37	03/07/01	N. BOUCHOUT		C. BELIN	
18	25/03/03	N. BOUCHOUT		C. BELIN	
29-31	26/08/03	N. BOUCHOUT		C. BELIN	
19	15/01/04	N. BOUCHOUT		C. BELIN	
38	20/04/04	N. BOUCHOUT		C. BELIN	
37	11/01/05	N. MAHUET		C. BELIN	
20,21,36	18/10/07	L. LAGARDE		C. BELIN	
20	14/04/08	L. LAGARDE		C. BELIN	

DATE : 14/04/08

0. WARNING

THIS DOCUMENT IS PROVIDED FOR INFORMATION ONLY. IT IS THE OWNER'S RESPONSIBILITY TO CHECK THE EXACTNESS OF THE PRESENT MATERIAL WITH RESPECT TO HIS/HER ACTUAL AIRCRAFT.

1. FLIGHT MANUAL

Model :

MCR CLUB

Serial Number :

Registration :

Document number :

Release date :

The pages identified by "Appr" are approved by :

Signature :

Authority :

Stamp :

Date of approval:

Certain details must be added by the builder to reflect the exact configuration and installation of engine, Propeller and instrumentation.

THIS PLANE MUST ALWAYS BE USED IN ACCORDANCE WITH THE INFORMATION AND LIMITATIONS CONTAINED IN THIS DOCUMENT.

THIS PLANE WAS BUILT FROM A KIT.

IT MUST NOT BE USED FOR HIRE OR REWARD.

THE USER IS RESPONSIBLE FOR THE USE OF THE AIRCRAFT , ENSURING THAT IT COMPLIES WITH REGULATIONS AND INFORMING ANY PASSENGER OF THE LIMITATIONS OF THE AIRCRAFT WITH RESPECT TO ITS AIRWORTHINESS LIMITATIONS.

THIS FLIGHT MANUAL WAS ESTABLISHED ACCORDNG TO FRENCH REGULATION.

1.1. REGISTRATION OF THE OVERHAULS

All amendments to this document must be entered in the table below, except weighing data, and all cases of approved sections, aimed and approved by the Authority responsible for Airworthiness.

The new text or amendment in the revised pages will be indicated by a dark vertical line in the left margin and the N° of the amendment and the date will be indicated on the bottom left corner of the page.

Revision N°	Affected section	Affected pages	Date	Approval	Date	Date of insertion	Signed

1.2. LIST OF PAGES

Section	Page	Date	Section	Page	Date

Intentionally left blank

2. TABLE OF CONTENTS

0.	WARNING	2
1.	FLIGHT MANUAL	3
1.1.	REGISTRATION OF THE OVERHAULS	4
1.2.	LIST OF PAGES	5
2.	TABLE OF CONTENTS	7
3.	GENERAL	9
3.1.	INTRODUCTION	9
3.2.	BASIS OF CERTIFICATION	9
3.3.	WARNINGS, ALARMS AND NOTES	9
3.4.	SPECIFICATIONS	10
3.5.	CONTROL SURFACE DEFLECTION	10
3.6.	THREE VIEW DIAGRAM	11
4.	LIMITATIONS	12
4.1.	INTRODUCTION	12
4.2.	AIRSPPEED	12
4.3.	INDICATED AIRSPPEED INSTRUMENTS MARKINGS	13
4.4.	ENGINE INSTALLATION	14
4.5.	ENGINE INSTRUMENT MARKINGS	17
4.6.	WEIGHT	18
4.7.	WEIGHT & BALANCE	18
4.8.	APPROVED MANOEUVRES	18
4.9.	MANOEUVRING LOAD FACTOR	19
4.10.	MINIMUM FLIGHT CREW	19
4.11.	TYPES OF FLIGHT	19
4.12.	FUEL	19
4.13.	MAXIMUM NUMBER OF SEATS	19
4.14.	TIRE PRESSION	20
4.15.	INSTRUMENT PANEL WEIGHT LIMITATION	20
4.16.	SOLO FLIGHT	20
4.17.	OTHER LIMITATIONS	20
4.18.	PLACARDS	20

5. EMERGENCY PROCEDURES	22
5.1. INTRODUCTION	22
5.2. ENGINE FAILURE	22
5.3. IN-FLIGHT RESTART	23
5.4. SMOKE AND FIRE	23
5.5. GLIDING	24
5.6. FORCED LANDING	24
5.7. RECOVERY FROM AN UNINTENTIONAL SPIN	25
5.8. OTHER EMERGENCIES	25
6. NORMAL PROCEDURES	26
6.1. INTRODUCTION	26
6.2. DAILY CHECK	26
6.3. PRE-FLIGHT CHECK	28
6.4. NORMAL PROCEDURES AND CHECK-LISTS	28
7. PERFORMANCES	32
7.1. INTRODUCTION	32
7.2. APPROVED DATA	32
8. WEIGHT & BALANCE	34
8.1. INTRODUCTION	34
8.2. WEIGHT & BALANCE REGISTRATION AND LOADING ENVELOPE	34
9. AIRCRAFT OPERATION, SERVICING AND MAINTENANCE	36
9.1. INTRODUCTION	36
9.2. AIRCRAFT MAINTENANCE SCHEDULE	36
9.3. AIRCRAFT MODIFICATIONS AND REPAIRS	36
9.4. PARKING	37
9.5. CLEANING AND TREATMENT	37
9.6. DE-RIGGING AND RIGGING	37
10. SUPPLEMENTARY SYSTEMS AND EQUIPMENTS	38
10.1. INTRODUCTION	38
10.2. MINIMUM EQUIPMENT LIST	38
10.3. LIST OF THE SUPPLÉMENTARY SYSTEMS AND EQUIPMENTS	38
10.4. SUPPLEMENTARY ELEMENTS DESCRIPTIONS	38

3. GENERAL

3.1. INTRODUCTION

The flight manual for the aircraft was designed to provide pilots and instructors with the information necessary to efficiently and safely fly this very light aircraft.

This manual contains information that are imperative to be given to the *MCR CLUB* pilot. It also contains supplementary information given by the builder.

The builder should complete the information appropriate to the particular configuration and selection of options.

A special place must be reserved on the luggage compartment floor in order to store this flight manual.

3.2. BASIS OF CERTIFICATION

This type of aircraft was approved by _____ in accordance with the regulations applicable to kit aircraft, including the amendment _____ and the certificate of restricted Airworthiness N° _____ has been issued on the _____.

Category of Airworthiness : **Restricted** (kit)

Basis of certification and/or acceptance:

3.3. WARNINGS, ALARMS AND NOTES

The following definitions apply to **Warnings, Alarms & Notes** used in the flight manual.

ALARM:

Signifies that a failure to observe the corresponding procedures will lead to an immediate or important deterioration of the flight safety.

WARNING:

Signifies that a failure to observe the corresponding procedures will lead to a minor or major deterioration of the long term flight safety.

NOTE:

Attracts the attention to a condition which although not particularly related to the flight safety is important or unusual.

3.4. SPECIFICATIONS

Kit aircraft of the type : *Dyn'Aéro MCR CLUB*

Cantilever low-mounted wing.

Carbon structure with wing and control surface skins made in light alloy.

Engine and Propeller

Span	6.90	m
Wing surface	6.46	m ²
Aspect ratio	7.36	
Cabin width	1.12	m
Fuel capacity	80	l
Overall Length	5.53	m
Height	1.53	m

3.5. CONTROL SURFACE DEFLECTION

- Ailerons : - 20° ^(±1) trailing edge upwards
 +10° ^(±1) trailing edge downwards
- Flaps : 0-45° ⁽⁺⁰⁻¹⁾
- Rudder : 20° ⁽⁻⁰⁺⁵⁾ in both directions (left and right)
- Tailplane : - 10° ⁽⁺⁰⁻²⁾ trailing edge upwards
 +3.5° ⁽⁻⁰⁺¹⁾ trailing edge downwards

3.6. THREE VIEW DIAGRAM

Erreur! Argument de commutateur inconnu.

Intentionally left blank

4. LIMITATIONS

4.1. INTRODUCTION

This section includes operating limitations, reference marks of instruments and placards necessary for the safe use of the aircraft, its engine, standard systems and equipment.

The limitations included in this section were approved by .

4.2. AIRSPEED

Airspeed limits and their operational significance.

	Airspeed	(IAS)	Remarks
VNE	Never exceed speed	300 km/h 162 kts	Velocity you must <u>N</u> ever <u>E</u> xceed, in any case
VNO	Maximum structural cruising speed	236 km/h 127 kts	Do not exceed this <u>V</u> elocity in <u>N</u> ormal <u>O</u> perations, except in calm air, and then , only with great cautions.
VA	Manoeuvring speed	202 km/h 109 kts	Do not apply abrupt or full-range control deflections beyond this speed, because under certain conditions, the Aircraft might be exposed to excessive loads.
VFE	Maximum speed allowed with flaps extended	165 km/h 89 kts	Do not exceed this <u>V</u> elocity with <u>F</u> laps <u>E</u> xtended

4.3. INDICATED AIRSPEED INSTRUMENTS MARKINGS

Air speed indicator reference marks and colour significance.

Marking	(IAS)	Significance
White segment	(79 / 165 km/h) (43 / 89 kts)	Speed range allowed with flaps extended
Green segment	(103 / 236 km/h) (56 / 127 kts)	Speed range for normal operational flight
Yellow segment	(236 / 300 km/h) (127 / 162 kts)	Manoeuvres must be carried out with caution and only in conditions of calm air
Red segment	(300 km/h) (162 kts)	Maximum speed for all operations

4.4. ENGINE INSTALLATION

Only the following engine and propeller configurations are authorised.

4.4.1. Rotax 912 S Engine

Engine manufacturer	Rotax
Engine type	912 S
Engine/propeller reduction ratio	2.43 / 1
Maximum power	
Take-off	100 HP
Continuous	92 HP
Maximum manifold pressure	
Take-off	27,5 "Hg / 930 mbar
Continuous	27 "Hg / 920 mbar
Maximum engine RPM	
Take-off	5800 RPM
Continuous	5500 RPM
Maximum Cylinder Head Temperature	135 °C / 275 °F
Maximum Oil Temperature:	130 °C / 266 °F
Oil pressure	
Minimum:	0.8 Bar
Maximum:	7 Bars
Fuel pressure	
Minimum:	0.15 Bar
Maximum:	0.40 Bar
Octane grade of fuel:	Voir manuel Rotax
Oil quality:	Voir manuel Rotax

4.4.2. Rotax 914 Engine

Engine manufacturer	Rotax
Engine type	914
Engine/propeller reduction ratio	2.43 / 1
Maximum power	
Take-off	110 HP
Continuous	100 HP
Maximum manifold pressure	
Take-off	38.4 "Hg / 1300 mbar
Continuous	34 "Hg / 1150 mbar
Maximum engine RPM	
Take-off	5800 RPM
Continuous	5500 RPM
Maximum Cylinder Head Temperature	135 °C / 275 °F
Maximum Oil Temperature:	130 °C / 266 °F
Oil pressure	
Minimum:	1.5 Bar
Maximum:	7 Bars
Fuel pressure	
Minimum:	pression admission + 0.15 Bar
Maximum:	pression admission + 0.35 Bar
Octane grade of fuel:	Voir manuel Rotax
Oil quality:	Voir manuel Rotax

4.4.3. MT variable pitch Propeller

Propeller manufacturer	MT Propeller
Propeller model	MTV-7-A/156-122
Type	Three-bladed, electrical variable pitch
Propeller diameter	1.56 m
Reference pitch setting (75% of propeller radius)	
normal:	variable pitch
Maximum allowed propeller rotation speed	2400 rpm
Torque	4.6 daN.m

Propeller manufacturer	MT Propeller
Propeller model	MTV-6-A/156-122
Type	Three-bladed, hydraulic variable pitch
Propeller diameter	1.56 m
Reference pitch setting (75% of propeller radius)	
normal:	variable pitch
Maximum allowed propeller rotation speed	2400 rpm
Torque	4.6 daN.m

4.4.4. MT fixed pitch Propeller to be used with Rotax 912S engine only

Propeller manufacturer	MT Propeller
Propeller model	MT 156-220-2M
Type	Two-bladed, fixed pitch propeller
Propeller diameter	1.56 m
Reference pitch setting (75% of propeller radius)	
normal:	220 mm
Maximum allowed propeller rotation speed	2400 rpm
Torque	1.6 daN.m

!! Tighten propeller bolts before first flight, after 1 flight hour and 5 flight hours. Then control tightening every 50 flight hours and after each ground period that last more than 1 month !!!!!!!

4.5. ENGINE INSTRUMENT MARKINGS

4.5.1. Rotax 912 S Engine

ROTAX 912 S

Instrument	Units	Red line Minimum Limit	Yellow sector Warning Range	Green sector Normal Range	Yellow sector Warning Range	Red Line Maximum Limit
Tachometer	Tr/Min	1400	1400 - 3500	3500 - 5500	5500 - 5800	5800
Oil temperature	°C	50	50 - 90	90 - 110	110 - 130	130
	°F	122	122 - 194	194 - 230	230 - 266	266
Cylinder Head Temperature	°C	60	60 - 80	80 - 110	110 - 135	135
	°F	140	140 - 176	176 - 230	230 - 275	275
Fuel Pressure	Bar	0.15		0.15 - 0.40		0.40
	PSI	2.2		2.2 - 5.8		5.8
Oil Pressure	Bar	0.8	0.8 - 2	2 - 5	5 - 7	7
Fuel Quantity	Litre	1				80

Note carefully :

Do not switch off the main switch before turning off the engine.

4.5.2. Rotax 914 Engine

ROTAX 914

Instrument	Units	Red line Minimum Limit	Yellow sector Warning Range	Green sector Normal Range	Yellow sector Warning Range	Red Line Maximum Limit
Tachometer	Tr/Min	1400	1400 - 3500	3500 - 5500	5500 - 5800	5800
Oil temperature	°C	50	50 - 90	90 - 110	110 - 130	130
	°F	122	122 - 194	194 - 230	230 - 266	266
Cylinder Head Temperature	°C	60	60 - 80	80 - 110	110 - 135	135
	°F	140	140 - 176	176 - 230	230 - 275	275
Fuel Pressure	Bar	Manifold pressure. + 0.15		manifold pressure. + 0.15 - 0.40		Manifold pressure. + 0.40
	PSI	+ 2.2		+ 2.2 - 5.08		+ 5.08
Oil Pressure	Bar	0.8	0.8 - 2	2 - 5	5 - 7	7
Fuel Quantity	Litre	1 Litre				80

Note carefully :

Do not switch off the main switch before turning off the engine.

4.6. WEIGHT


Maximum take-off weight : 490 kg

Maximum landing weight : 490 kg

4.7. WEIGHT & BALANCE

Centre of Gravity range 22/40% M.A.C.

Datum M.A.C.

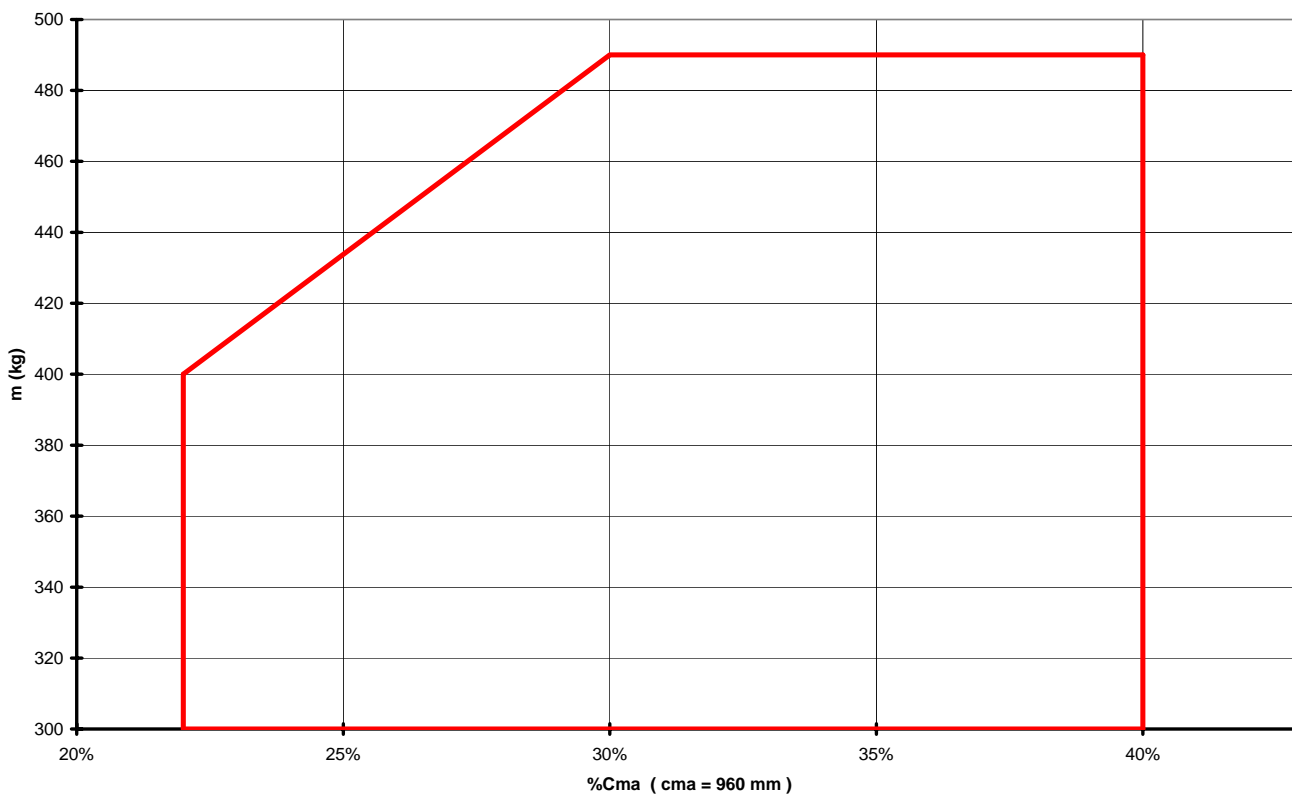

M.A.C. = 960 mm ; reference datum : 13.5 mm before left wing leading-edge.

4.8. APPROVED MANOEUVRES

THIS AIRCRAFT IS CERTIFIED IN THE NORMAL CATEGORY.

AEROBATIC FLIGHT IS PROHIBITED.

SPINS ARE PROHIBITED.

4.9. MANOEUVRING LOAD FACTOR

+3.8 / -1.5 g

4.10. MINIMUM FLIGHT CREW

Minimum flight crew is one pilot.

Two people onboard maximum.

4.11. TYPES OF FLIGHT

VFR / DAY.

4.12. FUEL

Total fuel : 80 l

Useable fuel : 79 l

Unusable fuel : 1 l

Fuel Octane grade approved: Refer to Rotax manual

4.13. MAXIMUM NUMBER OF SEATS

Two

4.14. TIRE PRESSION

Nose landing gear :	280 mm diameter wheel	2.2 bar
	210 mm diameter wheel	3 bar
Main landing gear :	280 mm diameter wheel	2.2 bar

4.15. INSTRUMENT PANEL WEIGHT LIMITATION

Maximum weight of instrument panel when equipped and wired = 15 kg

4.16. SOLO FLIGHT

For each solo flight, the unused harness must be locked.

4.17. FLAPS: 45° FLAP POSITION

The use full flaps (45° - short landing position) is authorized only on finals for short landings (or emergency landing), and only when no go-around is envisaged.

When the flaps are fully extended (45°) :

- ❖ In the event of a go-around : the throttle must be use with caution, slowly.
- ❖ Slide-slipping is strictly prohibited. During the final, the aircraft must be maintained in a straight line and without angled attack.

4.18. OTHER LIMITATIONS

USE FOR HIRE OR REWARD - PROHIBITED.

THIS AIRCRAFT MUST BE USED STRICTLY IN ACCORDANCE WITH THE LEGISLATION APPROPRIATE FOR KIT AIRCRAFT.

4.19. PLACARDS**4.19.1. During initial experimentation period**

Minimum 5 cm high placard "EXPERIMENTAL" must be placed next to each cabin openings.

4.19.2. In front of pilot view

Written in minimum 6 mm high letters and so that both pilots can easily read it, the following placard :

**THE COMPLIANCE OF THIS AICRAFT WITH A
CERTIFICATE OF AIRWORTHINES HAS NOT BEEN
DEMONSTRATED.**

USE FOR HIRE OR REWARD PROHIBITED.

**AEROBATIC FLIGHT AND INTENTIONAL SPINS ARE
PROHIBITED.**

MANOEUVRING SPEED 109 KTS.

4.19.3. Air speed indicator

Each air speed indicator must be marked as indicated in paragraph 4.3

4.19.4. Engine installation instruments

Each engine installation instrument must be marked as indicated in paragraph 4.5.

4.19.5. Control system markings

Each control system other than main flight control systems must be marked in order to explain its function and operation mode : brake control system, parachute control system must be marked in red if installed...

4.19.6. Miscellaneous placards and markings

In luggage compartment : "Maximum luggage weight = 15 kg"

Fuel tank filler : "Fuel tank : 80 l

Mini fuel grade : RON 90"

Oil tank filler "Oil tank : 3.5 l

10 W 40"

5. EMERGENCY PROCEDURES

5.1. INTRODUCTION

This section provides a list of appropriate actions in the event of certain emergencies. Providing that the aircraft is well maintained and proper pre-flight inspections are made, emergencies due to failure of the aircraft, aircraft engine or other systems is very rare.

However, should an emergency occur, the procedures described in this section of the manual should be adopted.

5.2. ENGINE FAILURE

5.2.1. Engine failure on take-off run

If there is enough runway length remaining :

- Fully reduce Power and apply brakes.

If there is insufficient runway length remaining :

- Fully reduce power
- Brake hard
- Fuel tap **closed**
- Magnetos **OFF**
- Battery **OFF**

5.2.2. Engine failure immediately after take-off

- Airspeed **70 knots**
- Fuel tap **closed**
- Magnétos **OFF**
- Flaps **as required**
- Battery **OFF**

Never attempt to make a U turn to return to the runway.

5.3. IN-FLIGHT RESTART

5.3.1. Starter motor restart

If the altitude is sufficient to attempt to restart the engine :

- Airspeed **70 knots**
- Fuel tap **open**
- Electric fuel pump **on**
- Throttle setting..... **1/2**
- Magnetos **"BOTH"**
- Starter **on**

If the motor does not start, plan to make a forced landing.

5.3.2. Dive restart

If the altitude is sufficient to attempt to restart the engine (minimum altitude lost 1500 feet) :
Nose dive as explained :

- Airspeed **>135 knots**
- Fuel Tap **open**
- Electric pump..... **on**
- Throttle setting..... **1/2**
- Magnetos **"BOTH"**

If the motor does not start, plan to make a forced landing.

5.4. SMOKE AND FIRE

5.4.1. Fire on engine start

Continue starting the engine (or leave it running if it is has already started)

- Throttle setting..... **fully open**
- Electric fuel pump **off**
- Fuel tap **closed**

If the fire persists :

- Magnetos **off**
- Battery **off**

EVACUATE THE AIRCRAFT

5.4.2. Airborne engine fire

- Fuel tap **closed**
- Full throttle until the engine stops
- Electric fuel pump **off**
- Cabin heating and ventilation **closed**
- Airspeed **70 knots**

Prepare for a forced landing with an engine inoperative.

5.4.3. Cabin fire

Extinguish the fire
Open ventilation to eliminate the smoke.

In case of an electrical fire (recognised by the smell of burning insulation) :

- Reduce cabin ventilation
- Battery **off**

LAND QUICKLY

5.5. GLIDING

- Recommended air speed, **70 knots**
- Flaps **0°**
- Glide ratio **13.4**

5.6. FORCED LANDING

5.6.1. Planned forced landing with engine stopped

Choose a suitable site

- Best glide ratio airspeed **70 knots**
- Flaps **retracted / as required**
- Belt / Safety harness **tight**
- Electric fuel pump **off**
- Throttle setting **closed**
- Magnetos **off**
- Fuel Tap **closed**
- Battery **off**

5.6.2. Planned forced landing with engine running

- Proceed as for a normal landing
 - Best glide ratio speed **70 knots**
 - On final approach, unlock the canopy
 - Approach speed on final..... **65 knots**
- Prior to touchdown:
- Magnetos **off**
 - Battery **off**

5.7. RECOVERY FROM AN UNINTENTIONAL SPIN

- Throttle **reduce**
- Flaps **retract**
- Rudder **opposite spin direction**
- Elevator **to neutral**
- Aileron **to neutral**

5.8. OTHER EMERGENCIES

5.8.1. Vibrations and erratic engine behaviour : likely causes.

- Contaminated fuel **switch on the electric fuel pump**
- Ignition : magneto switch **"L", then "R",**
..... **then return to "BOTH"**

Select the position that gives the smoothest running and land as soon as possible on the closest runway.

5.8.2. Oil feed malfunction

If the oil pressure is low, look at the oil temperature

If the oil temperature rises (into the red), do not touch the throttle but contact the closest airfield and prepare to make a forced landing.

5.8.3. Icing

Avoid entering icing meteorological zones and change altitude.
Set heating system to de-mist and/or apply carb heat (if equipped).

5.8.4. Electric generation failure

Low battery warning light **lit**

5.8.5. Low voltage (voltmeter).

Switch off all non-essential electrical equipment and fly to the nearest airfield and land.

6. NORMAL PROCEDURES

6.1. INTRODUCTION

This section provides with a list of standard checks and procedures to be used in normal flight conditions. Procedures applicable to the use and check of optional equipment should be found in the "Supplementary systems and equipment" section.

6.2. DAILY CHECK

1 CABIN

- Seats adjusted, locked
- Safety harness attachments checked
- Elastic (left and right side)..... in place
- Flap control belt in place, tight
- Primary wing attachment pins..... in place, safety pinned
- Front wing fixings in place, secure
- Rear wing fixings in place, secure
- Pitot tube connected
- Controls free
- Magneto contacts off / cut
- Master (battery) switch..... on
- Fuel level checked
- Fuel tank check actual level
- Fuel filler cap in place, locked
- Master (battery) switch..... off
- Documentationall present and correct
- Weight and balance (including luggage) checked
- Canopy condition (clean) checked

2 FUSELAGE, LEFT SIDE

- Static vent, clean, unobstructed
 - Antenna mounting..... checked
- Watch out not to hurt yourself with antennas

3 TAIL

- Smooth, non-blemished surfaces checked
- Rudder mounting / fixing / movement / cables / absence of play
- Tailplane.....mounting / fixing / movement / absence of play

- Control rod in place, secure
- Anti servo tab control in place

4 FUSELAGE, RIGHT SIDE

- Static vent clean, unobstructed
 - Antenna mounting..... checked
- Watch out not to hurt yourself with antennas

5 RIGHT WING

- Aileron and flap conditions and hinges checked
- Tightness to fuselage..... checked
- Tightness & safety of front wheel and main undercarriage fairings and spats checked
- Wing tip condition and safety, navigation lights (where fitted)..... checked
- Main undercarriagebrakes / tyre inflation checked

6 ENGINE COWLS

- Cowl fixing screws checked
- Air vents clean, unobstructed
- Propeller spinner screws checked, no play or looseness
- Propeller clean, good condition
- Oil level checked
- Fuel drain : Check for absence of water and impuritiesoperate and check
- Exhaust pipe fixings checked
- Fuel tank air vent (beneath fuselage) clean, unobstructed

* To correctly determine the oil level it is necessary to remove and clean the dip stick before dipping and reading the level.

7 LEFT WING

- Main undercarriage (left).....mounting, brakes, tyre inflation checked
- Pitot clean, unobstructed
- Wing tip condition and security, navigation lights (where fitted)..... checked
- Aileron and flap conditions and hinges checked
- Tightness to fuselage..... checked
- Tightness & security of front wheel and main undercarriage fairings and spats checked

6.3. PRE-FLIGHT CHECK

Repeat the daily inspection

6.4. NORMAL PROCEDURES AND CHECK-LISTS

6.4.1. Cabin check prior to engine start

- Parking brake **on**
- Flaps **retracted**
- Seats **adjusted**
- Rudder pedals **adjusted**
- Safety harness **tightened**
- Flight controls **full and free**
- Pitch trim operation **full fwd / aft range checked / take-off position**
- Canopy **closed not locked**

6.4.2. Cold engine start (ROTAX)

- Battery **on**
- Fuel tap **check function / open**
- Fuel Quantity **noted**
- Electric fuel pump **on**
- Propeller **set minimum pitch**
- Throttle setting **1/4**
- Choke **pull**
- Propeller area **clear**
- Magneto contacts **BOTH**
- Starter **operate when ready**

As soon as the motor starts :

- Electric fuel pump **off**
- Choke **push**
- RPM **1 600 rpm**
- Oil pressure **within yellow sector in 10 sec. (4 bar for Rotax 912)**
- Battery voltage **checked**
- Canopy **locked / checked**

6.4.3. Hot engine start

- Battery **on**
- Fuel tap **open**
- Electric fuel pump **on**
- Fuel quantity **noted**
- Propeller **full fine pitch**
- Throttle **closed**
- Magnetos **BOTH**
- Propeller area **clear**
- Starter **operate when ready**

Then follow the procedure for starting when cold.

6.4.4. Taxiing

- Parking brake **off**
- Brakes **checked**

6.4.5. Engine ground run

- Parking brake **on**
- Oil temperature and pressure **within green sector**
- RPM set to **3 850 rpm**
- Magneto contact **"L", BOTH, "R", BOTH**
 **max drop 300 rpm, max difference 100 rpm, checked**
- Reduce throttle setting **1 600 rpm**
- Variable pitch propeller (if installed) **pitch regulation control**

6.4.6. Pre-take-off checks

- Magneto contacts **BOTH**
- Controls **full and free**
- Cabin (canopy, harness) **checked**
- Oil pressure and temperature **within green sector**
- Charge **checked**
- Trim **checked**
- Altimeter **checked**
- Fuel tap **open**
- Fuel quantity **checked**
- Electric fuel pump **on**
- Warning light panel **unlit**
- Flaps **Check full extension, and set to take-off position**
- Compass **checked**

6.4.7. Take-off

- Minimum RPM at full throttle **5 500 rpm checked**
- Take-off airspeed **55 kts**
- Initial climb airspeed **Vx : 70 kts**
- Climb airspeed when clear of obstacles **Vy : 75 kts**
- Electric fuel pump @ 300 ft AAL **off**
- Engine readings **checked**
- Warning light panel **unlit**
- Flaps **Retracted**

6.4.8. Climb

Full throttle, maintain 75 kts I.A.S. until reaching 4000 ft AAL.

6.4.9. Cruise

See "Performance" section for rpm setting and performances.

6.4.10. Descent

- Fuel tap **open**
- Engine minimum rpm..... **2 400 rpm**

6.4.11. Approach

- Cabin (harness) **tight**
- Electric fuel pump **on**
- Flaps (under 90 kts)..... **extended**
- Warning light panel **unlit**
- Altimeter **set**
- Brakes **free**
- Variable pitch propeller (if installed)..... **low pitch**

6.4.12. Final

- Airspeed **65 kts**

6.4.13. Go-Around

- Airspeed **>70 knots**
- Flaps **retracted**
- Climb airspeed **75 knots**

6.4.14. Post-landing checks

- Flaps **retracted**
- Electric fuel pump **off**

6.4.15. Engine Stop

- Parking brake **on**
- Radio, Navigation and instruments **off**
- Magnetos **cut-off test @ 2000 rpm**
- Strobe light **off**
- Magneto contact **off**
- Battery **off**

Intentionally left blank

7. PERFORMANCES

7.1. INTRODUCTION

This section provides approved information relating to standardised air speeds, stall speeds, take-off performance and supplementary non approved information.

The information given in the diagrams was obtained from flight tests with an aircraft and an engine in good condition and in the hands of an average pilot.

7.2. APPROVED DATA

7.2.1. Airspeed indicator calibration

$$V=V_i +1/23 \text{ knots}$$

7.2.2. Stalling speed (knots)

$$m = 490 \text{ kg}$$

	Flaps	0°	17°	30°	45°
Bank angle					
0 °		56	48	45	43
30 °		60	51	48	46
60 °		79	67	63	60

$$m = 400 \text{ kg}$$

	Flaps	0°	17°	30°	45°
Bank angle					
0 °		50	43	40	38
30 °		54	46	43	41
60 °		71	61	57	54

7.2.3. Take-off performances

With fixed pitch propeller and take-off weight = 490 kg

Take-off run = 170 m

Distance to 15 m = 250 m

7.2.4. Landing distances

Approach 57 kts = 1.3 VS

Land distance on a hard runway in standard conditions is 270 m.

7.2.5. Take-off distances calculation

Take-off distances must be increased by :

20% on a grass strip.

40% on a wet runway (take-off only)

They must be reduced by:

10% for each 10 kts head wind step.

They can be computed for intermediary masses by considering a 2.5% change for each 10 kg step.

7.2.6. Effect of rain and insects on aircraft performance, flying and handling qualities.

Decrease the performances by 4%

7.2.7. Cross-wind demonstrated performances

20 kts

7.2.8. Noise limitations

Noise certificate is not required for aircraft with certificate of restricted Airworthiness.

8. WEIGHT & BALANCE


8.1. INTRODUCTION

This part presents loading cases where the aircraft can be safely operated.

Weighing and balance calculation procedures and a complete list of the equipment available (especially those mounted for weighing) on the aircraft are included in the maintenance manual.

8.2. WEIGHT & BALANCE REGISTRATION AND LOADING ENVELOPE

8.2.1. Loading envelope

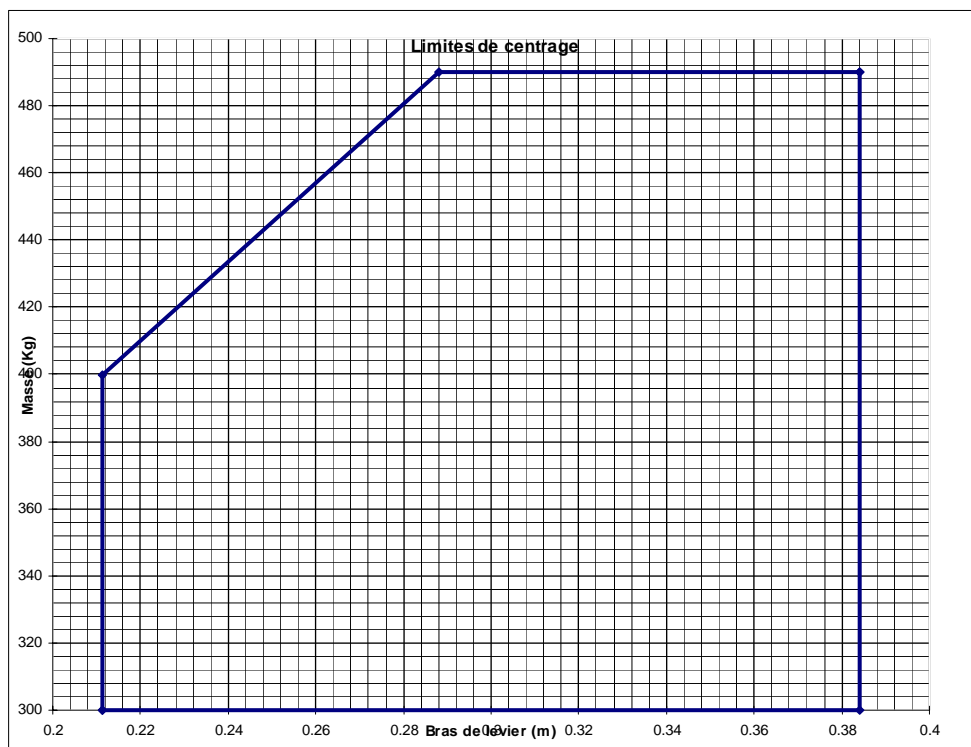

M.A.C. =960 mm ; Reference datum : 13.5 mm ahead of left wing leading-edge.

8.2.2. Weight & balance procedure

	Weight	Moment arm			Moment
	kg		m		m.Kg
Empty weight		x		=	
Pilot		x	0.700	=	
Co-pilot		x	0.700	=	
Luggage		x	1.150	=	
Front fuel tank		x	0.020	=	

Total Weight	
---------------------	--

Moment sum	
-------------------	--

Note :

The above chart shows MCR mean moment arms. It must be completed with the actual empty weight and moment arm of the Aircraft. Also update if possible the actual moment arms of movable weight by weighing your Aircraft (refer to MBENOPP Weighing procedure).

Calculation method

- Note movable weights in fill above chart (shaded boxes).
- Compute total mass
- Multiply weights and corresponding moment arms and note the results in "Moment" column.
- Compute the moment sum.
- Divide the moment sum by the total weight. The result gives the location in meter of the actual Aircraft center of gravity.
- Check the computed moment arm is within the weight and balance envelope shown on previous page.

9. AIRCRAFT OPERATION, SERVICING AND MAINTENANCE

9.1. INTRODUCTION

This section provides the procedures required by the manufacturer for the handling and the maintenance of the aircraft. It also shows a few maintenance and inspection requirements which must be fulfilled in order to ensure performance and reliability of a new aircraft. According to the environment and flight conditions, a lubrication and maintenance schedule must be applied.

9.2. AIRCRAFT MAINTENANCE SCHEDULE

Advised inspections:

50 hours
100 hours / 1 year
1 000 hours
5 years

RESPECT THE MAINTENANCE MANUAL SCHEDULE MEXNO08

9.3. AIRCRAFT MODIFICATIONS AND REPAIRS

The Airworthiness authorities and the manufacturer must be informed before all modification or repair, which can change the aircraft Airworthiness.

9.4. PARKING

Parking brake on,
Canopy locked,
Canopy cover advised,
Main landing gear wheels choked.

9.4.1. Parking requirements

The Aircraft may be exceptionally parked outside for short period only (in particular for marine environment conditions).

In order to preserve the instruments during these outside parking periods, protect the canopy with a cover especially in sunny conditions. Also remember to close static and dynamic pitots.

After each outside parking period, carry out a complete visual inspection of the Aircraft to search corrosion evidence, and wash the outside of the Aircraft with clean water and protected static and dynamic pitots.

9.4.2. Ground fixing

The aircraft can be secured to the ground from the wheels.
Wing attach fittings using 6 mm diameter captive nut can also be installed.

9.5. CLEANING AND TREATMENT

Regularly clean all control surfaces and the inside of the aircraft.

Cleaning products must be suitable for surfaces to be cleaned. Check product before each canopy cleaning.

9.6. DE-RIGGING AND RIGGING

You may have to disassemble the wings and the tailplane, to store the plane, to carry out a maintenance check, or to put the plane into its road trailer.

In such a case, please refer to the document OEXNO12 : MCR Club and ULC DE-RIGGING / RIGGING PROCEDURE.

10. SUPPLEMENTARY SYSTEMS AND EQUIPMENTS

10.1. INTRODUCTION

This section presents the appropriate supplementary elements to safely and properly use the aircraft with the following optional systems and equipment that are not delivered with the standard aircraft (list to be completed by the assembler).

10.2. MINIMUM EQUIPMENT LIST

Flight instruments Air speed indicator
 Altimeter
 Magnetic compass
 Ball bank indicator
Engine instruments Tachometer
 Oil temperature
 Oil pressure
 Cylinder head temperature
 Fuel level indicator
Oil level indicator

10.3. LIST OF THE SUPPLÉMENTARY SYSTEMS AND EQUIPMENTS

Date	Document N°	Title of the supplementary element

10.4. SUPPLEMENTARY ELEMENTS DESCRIPTIONS